



Mongoose Strop Repair - Flat Nylon Braid Method



Identify section for repair, clean and tidy to prepare.



Soak nylon braid in hot water prior to repair. Wet nylon braid will shrink when dry.



Insert braid through the Mongoose strop one end of repair.



Form a loop of the nylon braid across the area to be repaired above where braid brought through the strop.



Begin tightly winding nylon braid across the repair section beginning from open loop end.



Wrap the braid to the end of the loop fully covering repair section.



Bring the end of the braid through the Mongoose strop and through the loop.



Draw the open end of the braid through the loop which pulls the loop to the centre of the whipping to lock in both ends.



This will leave some excess braid at either end of the whipping.




The excess braid can be neatly trimmed.



The repaired section is now left to dry. Once dry the braid will be firm on the strop and ready for coating.



Prepare for coating with Donaghys Urethane Rope Coat with a paint brush to apply.

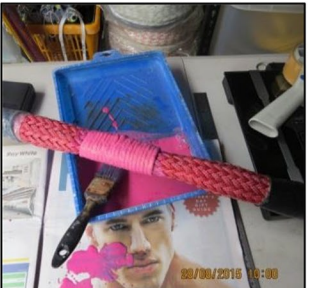

Paint on Donaghys Rope Coat generously, and two coats overall are recommended.



Once fully dry, the strop is repaired and ready to be put back into use.