




Mongoose Strop Repair - With Glued Heat Shrink



Step 1
Inspect, clean and prepare for repair.



Step 2
Put loose Shrink Sleeve on the strop and exert reference tension on rope.

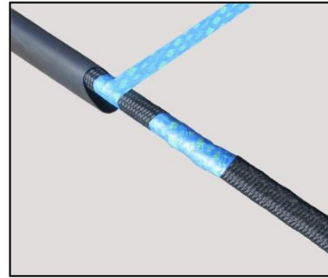

Step 3
Whilst under tension cover damaged section * end sections with masking tape.



Step 4
Centrally position Shrink Sleeve, heat from centre then out with Heat Gun.



Step 5
Heat shrink sleeve one end to edge, masking tape protects fibres at ends.



Step 6
Shrink the other end until firmly shrunken onto the strop.



Step 7
The end masking tape can be removed with Stanley knife or similar.



Step 8
Final inspection of the repair, still compressed under tension. Allow shrink to cool.



Step 9
Completed repair, the strop can be released from tension and re-used.



BACK IN ACTION